

# Fault Diagnosis for UV Sterilization System


Step 1 , Remove the top cover of ventilator



Pic 1 , cut off power source for ventilator



Pic 2 , remover the top cover

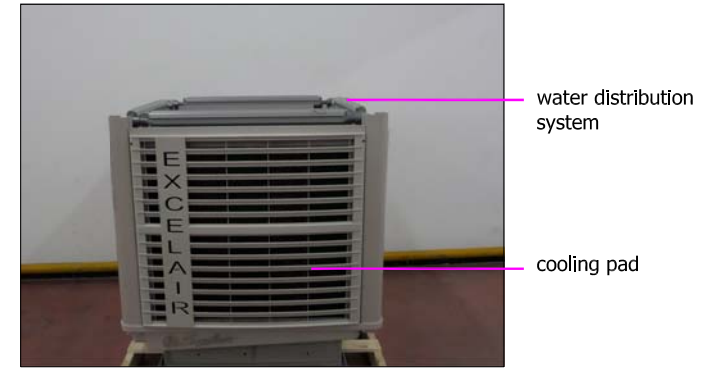


Pic 3 , Put back the cooling pad , then check the working status of UV Sterilization System form the cooler top with below step.

Step 2 , Check the working status of UV Sterilization System



Pic 4 , power on , turn on machine and switch to cooling status , and turn to low speed segment .

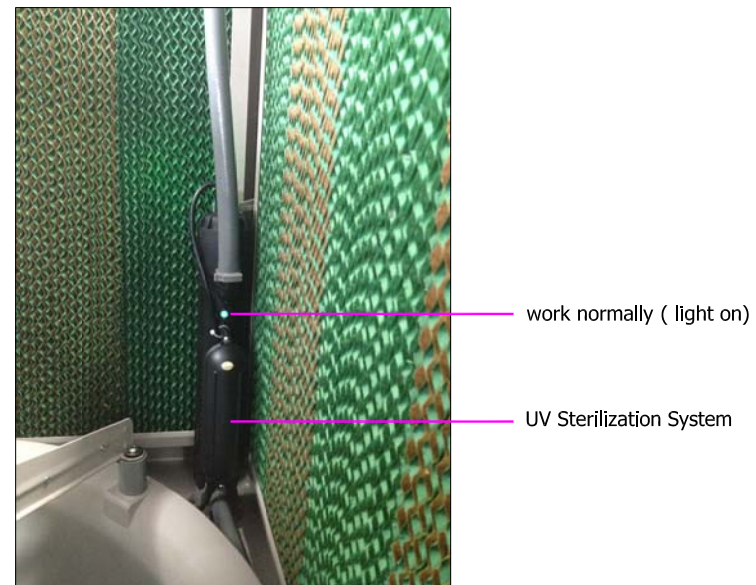

Pic 5 , after running 6 minutes , check the UV indicating light status